

PL-FD113 Liquid Differential Pressure Switch



Features:

- Benefit:
- Wide range and adjustable switching point
- Switches 24-240Vac/dc
- ¼" BSP female connections

• Visible set point scale

Technical Overview

The PL-FD113 liquid differential pressure switch is suitable for the monitoring flow across pumps, chillers, valves etc. The set point is adjustable in the range 0.3 to 4.5bar, and is suitable for non-aggressive media such as water, air, oil, diesel, steam etc.

Approximate set point can be viewed on the dial at the front of the unit.





Specification:

Part Codes:

Range 0.3 to 4.5 bar (4.4 to 65.3 psi)

Factory setting 0.7 Bar (10.2 psi)
Switching differential (fixed) 0.2 Bar (2.9 psi)
Max. differential pressure 12 Bar (174 psi)
Max. pressure 25 Bar (362.6 psi)
Pressure connections 1/4 BSP female

Ambient temperature $-10 \text{ to } +70^{\circ}\text{C} \text{ (14 to 158°F)}$

Media temperature Max 70°C (158°F)

Electrical connections Screw terminals for 1.5mm²

cable

Switch ratings:

AC 3A @ 230 Vac DC 0.1A @230Vdc

Materials:

Fittings Brass

Wetted parts Phosphor bronze
Switch back plate Zinc plated mild steel
Housing cover Flame res. Polycarbonate
Dimensions 128 x 175 x 48mm

128 x 175 x 48mm (5.04 x 6.89 x 1.89")

Protection IP30 Vibration resistance 4G

Country of origin Czech Republic

PL-FD113

0.3 to 4.5bar (4.4 to 65.3 psi) Liquid differential

pressure switch

 ϵ

The products referred to in this data sheet meet the requirements of 2006/95/EC



Warning!

When installed, the output contacts may carry 240Vac. Special care must be taken to isolate the switched voltage prior to any work being undertaken.

Tel: +44 (0)1732 861200. - E-mail: sales@sontay.com. - Web: www.sontay.com. © 2012 Sontay Limited. All rights reserved




Installation, Electrical Connections & Dimensions:


- 1. The PL-FD113 should only be connected by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc). Pressure connections should carried out by a technician qualified to work with the media being monitored.
- 2. Ensure that all power is disconnected before carrying out any work on the PL-FD113.
- 3. Ensure that the unit is not subjected to ingress by water.
- 4. Mount the PL-FD113 using the screws supplied. If the supplied screws are lost, an M4 \times 6 screws can be used. This must have a depth of 5mm (0.2") or less.
- 5. Connect pipe work using ¼" BSP male adapters into the ¼" BSP female fittings on the switch. Low pressure connection is at the top of the switch and the high pressure connection at the bottom as per the diagram below.
- 6. Set the switching point by inserting a screwdriver into the slots wheel above the scale.

It is not recommended that the scale is not used for accurate setting of the switch position.

Electrical connections;

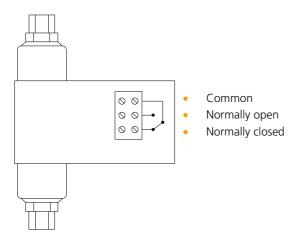

Dimensions;

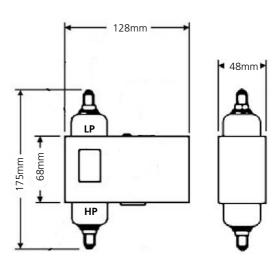

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.

Tel: +44 (0)1732 861200. - E-mail: sales@sontay.com. - Web: www.sontay.com. © 2012 Sontay Limited. All rights reserved